




TOP AND CONSOLE PARTS

For Model: LER5634LQ0
(Designer White)

29" ELECTRIC DRYER

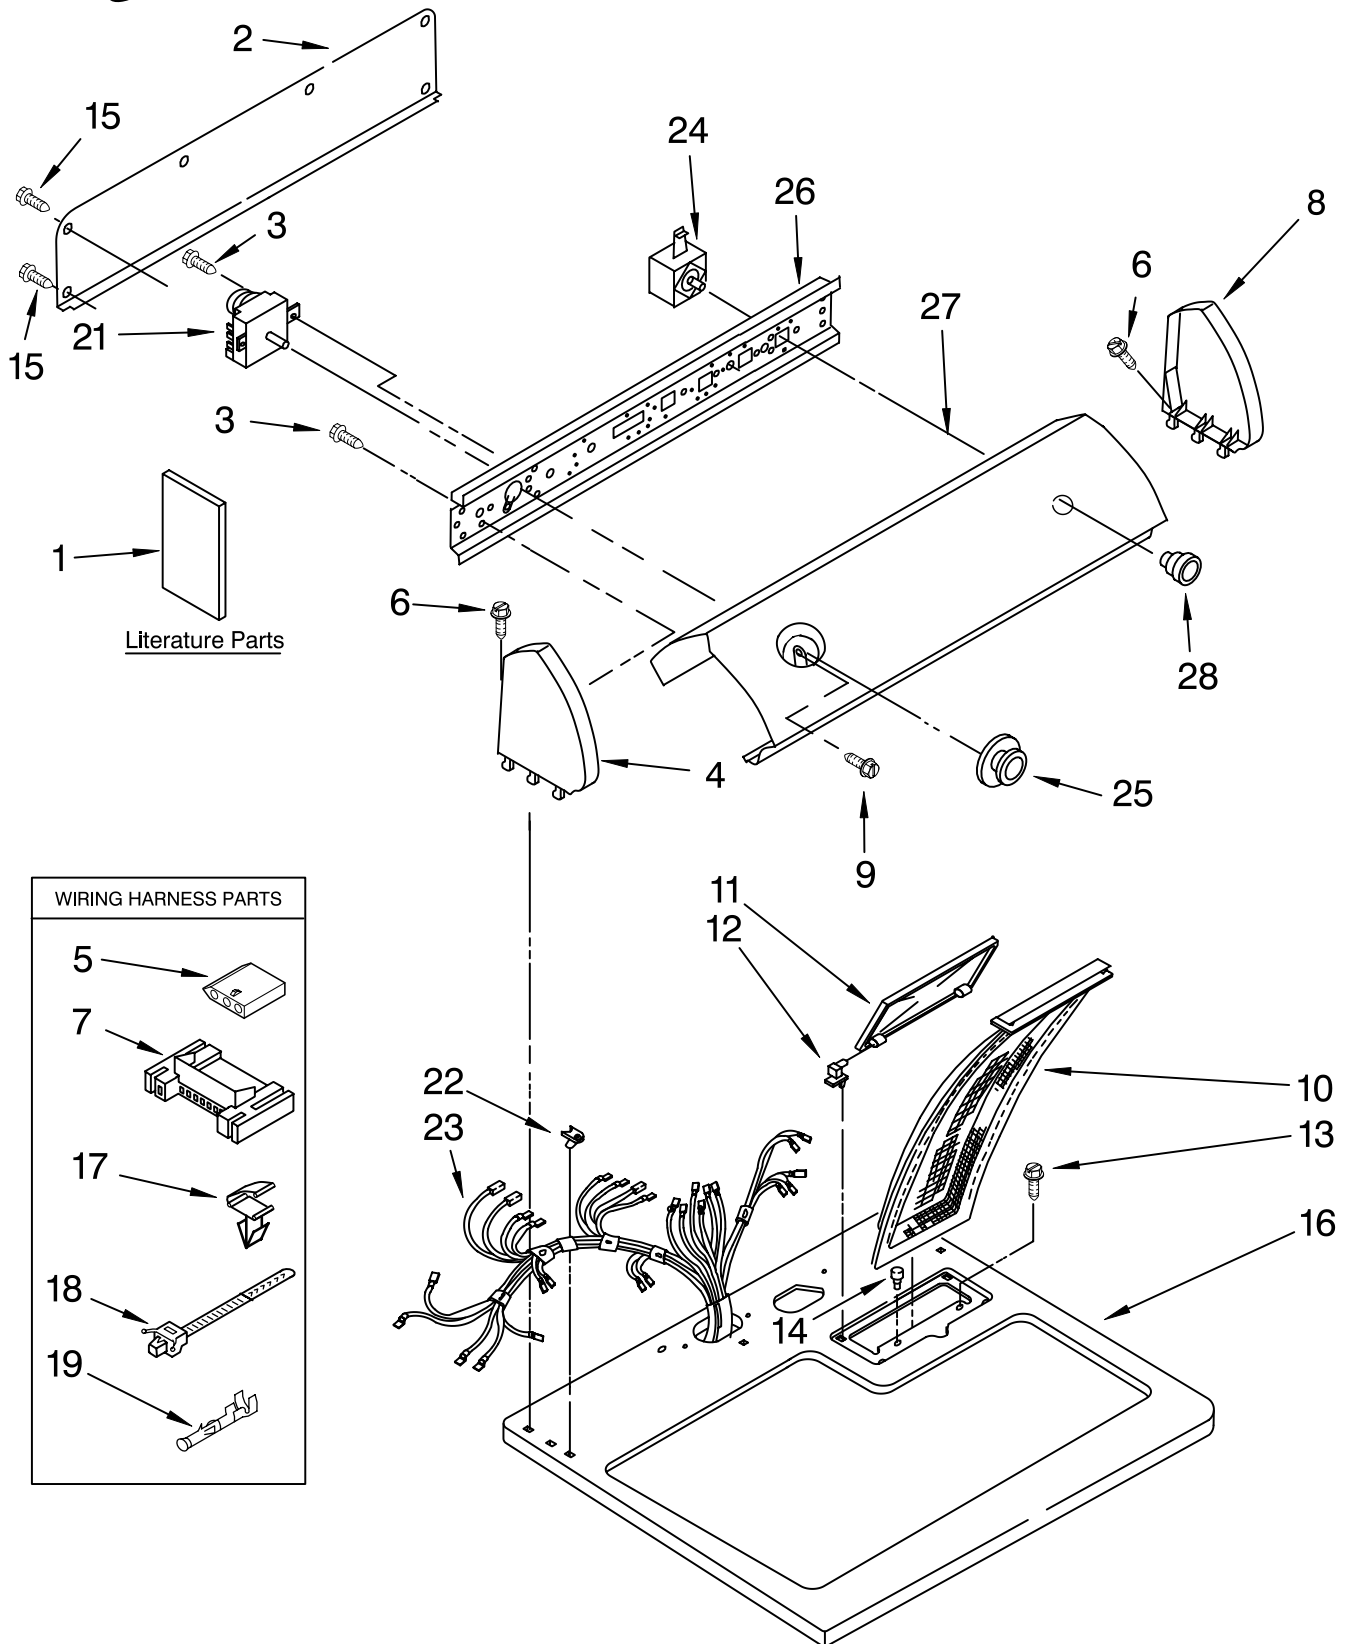

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

TOP AND CONSOLE PARTS


For Model: LER5634LQ0
(Designer White)

Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION
1		Literature Parts	4	8271365	Cap, End (L.H.)	16	8271390	Top
	LIT8528324	Use & Care Guide	5	3936144	Connector	17	3394427	Clip, Harness
	LIT3397618	Installation Instructions	6	388326	Screw, Console	18	3391249	Tie, Cable
	LIT8528187	Wiring Diagram	7	3395683	Housing, Connector (Motor)	19	94614	Terminal
Following May Be Purchased			8	8271359	Cap, End (R.H.)	21	8299778	Timer, 60 Hz.
DO-IT-YOURSELF REPAIR MANUALS			9	3400859	Screw, Grounding	22	357213	Nut, Push-In (2)
	LIT677818	Dryer	10	339392	Screen, Lint	23	8299867	Harness, Wiring
2	8274261	Panel, Rear Console	11	8283378	Cover, Lint Screen	24	3977456	Switch, Push-To-Start
3	3390646	Screw, 8-18 x 5/16	12	3978605	Hinge, R.H.	25	8312687	Timer Knob Assembly
				3978606	Hinge, L.H.	26	8271418	Bracket, Control
			13	688983	Screw, 8-18 x 5/8	27	8532602	Panel, Control
			14	297535	Bumper, Lint Lid	28	8271341	Knob, Push-To-Start
			15	693995	Screw, Hex Head			

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

CABINET PARTS

For Model: LER5634LQ0
(Designer White)

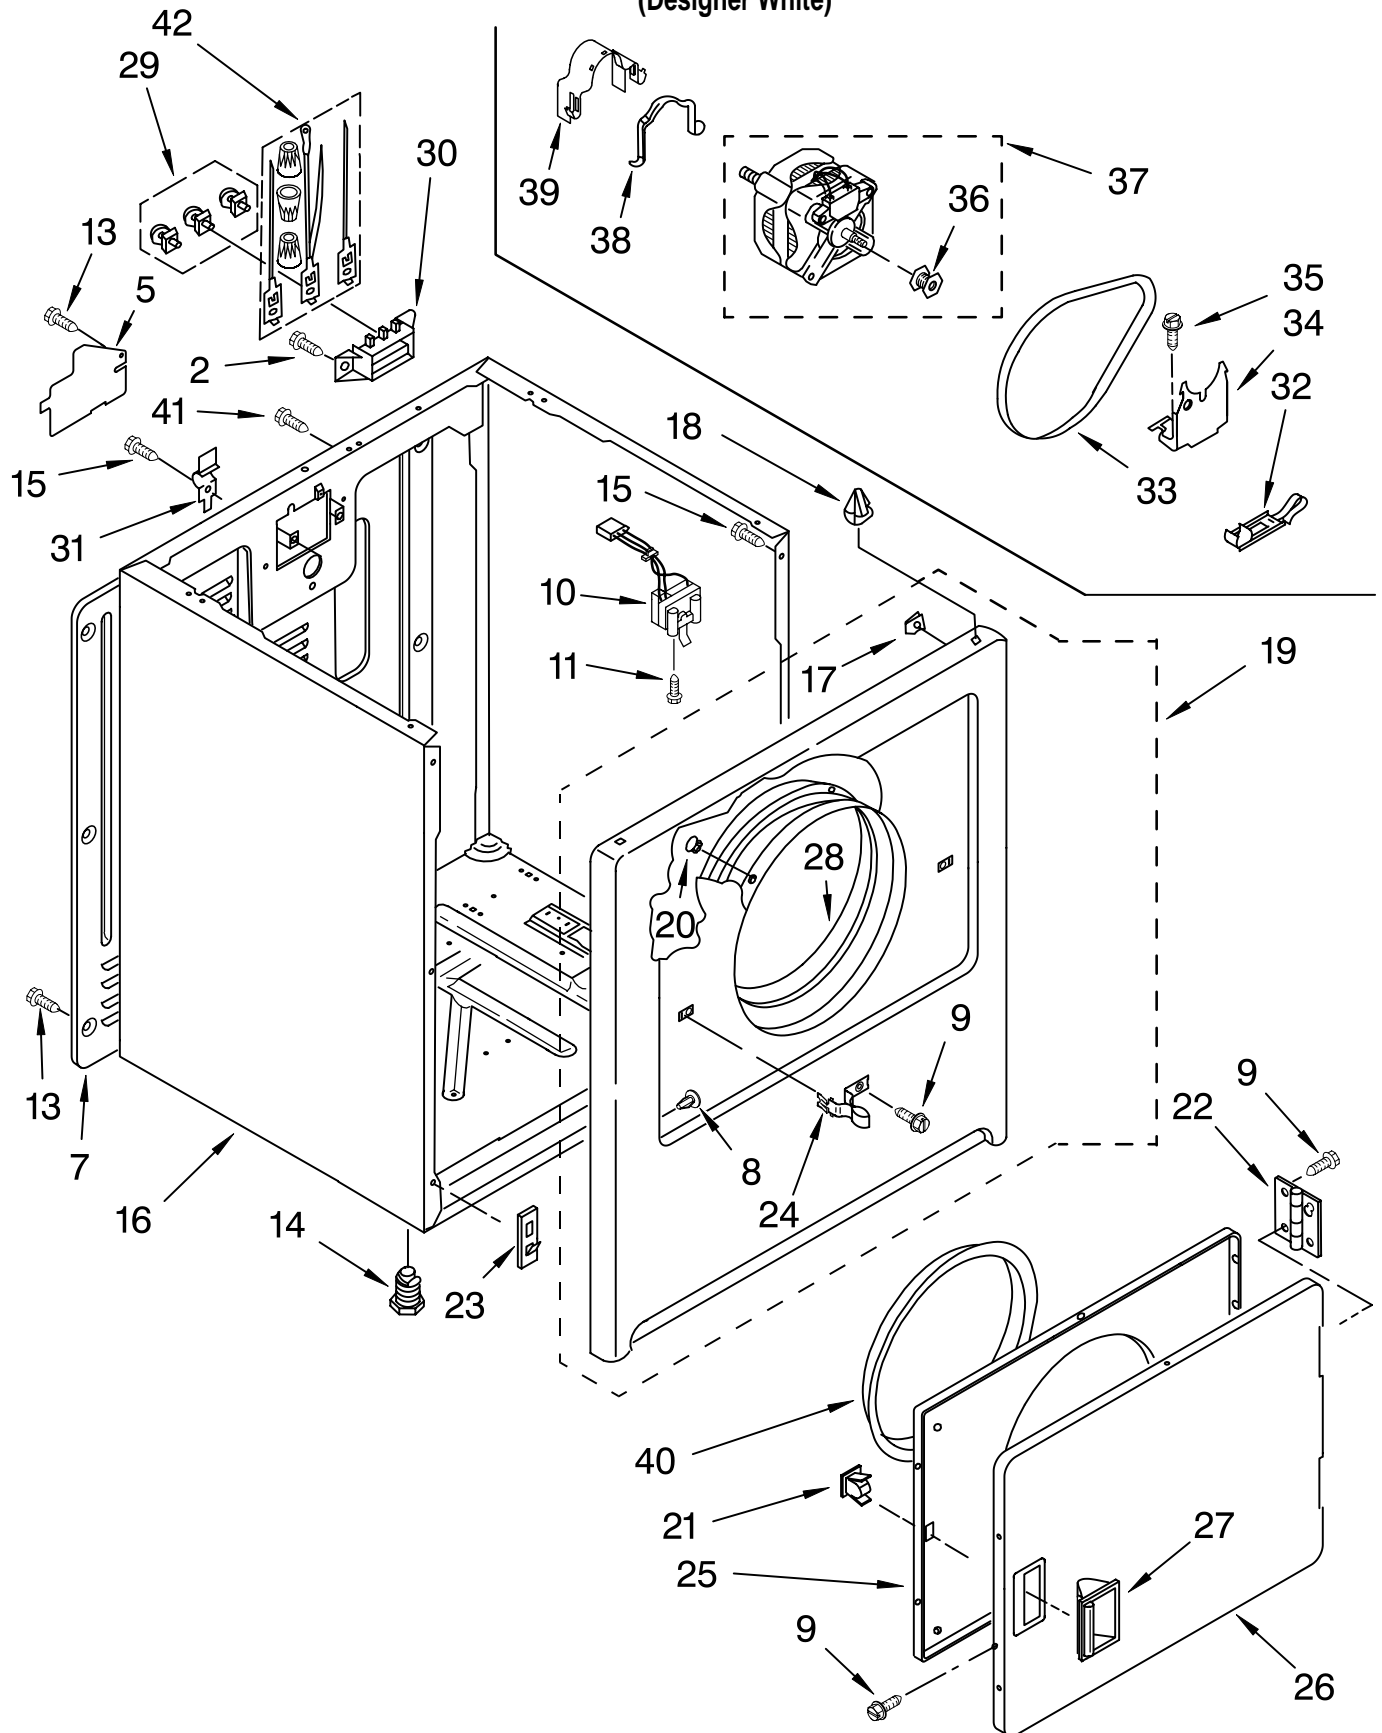

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

CABINET PARTS

For Model: LER5634LQ0
(Designer White)


Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION
2	3393008	Screw, 10–16 x 1/2	18	690363	Lock, Front Top (2)	32	3394332	Idler & Pulley Assembly
5	3396795	Cover, Terminal Block	19	3403571	Front Panel Assembly	33	8066065	Belt, Drive
7	3396807	Panel, Rear	20	685203	Clip, Felt Pad	34	348780	Base, Motor
8	3404413	Plug, Hinge Hole (4)	21	690081	Catch, Door	35	3400500	Bolt, 5/16–18 x 3/4
9	342055	Screw, 8–18 x 1/2	22	3405514	Hinge & Pin Assembly	36	3394341	Pulley, 60 Hz.
10	3406104	Door Switch Assembly	23	3394083	Clip, Front Panel (2)	37	661654	Motor Assembly 60 Hz.
11	697773	Screw, 6–20 x 7/8	24	696144	Strike, Door	38	660658	Clamp, Motor
13	693995	Screw, Rear Panel Mounting	25	3403371	Door, Rear	39	3404162	Clamp, Motor (W/Shield)
14	3392100	Foot, Dryer	26	3403361	Door Front	40	3405245	Seal, Door
	279810	Foot – Optional (Extended Length Package Of 2) (Not Included)	27	3405184	Handle, Door	41	697776	Screw, 10–32 x 5/8 (External Ground)
15	343641	Screw, 10–16 x 1/2	28	8066124	Seal & Bearing Assembly	42	279318	Terminal, Tinned & Brass (3) (Includes Illus. 29)
16	8530603	Cabinet	29	279393	Terminal Block Kit For			
17	98234	Clip, Ground			Terminal Block			
			30	3397659	Block, Terminal			
			31	238088	Hinge, Top (2)			

OPTIONAL PARTS (NOT INCLUDED)

Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION
ACCESSORY PARTS			PAINT, TOUCH-UP (1/2oz.)			PAINT, BULK (1 qt.)		
	279948	Kit, Dryer Repair		72017	White		799344	White (Uncut)
	689790	Dry Rack	PAINT, PRESSURIZED SPRAY (12 oz.)					
				350930	White			
				350938	Primer, Gray			

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

**For Model: LER5634LQ0
(Designer White)**

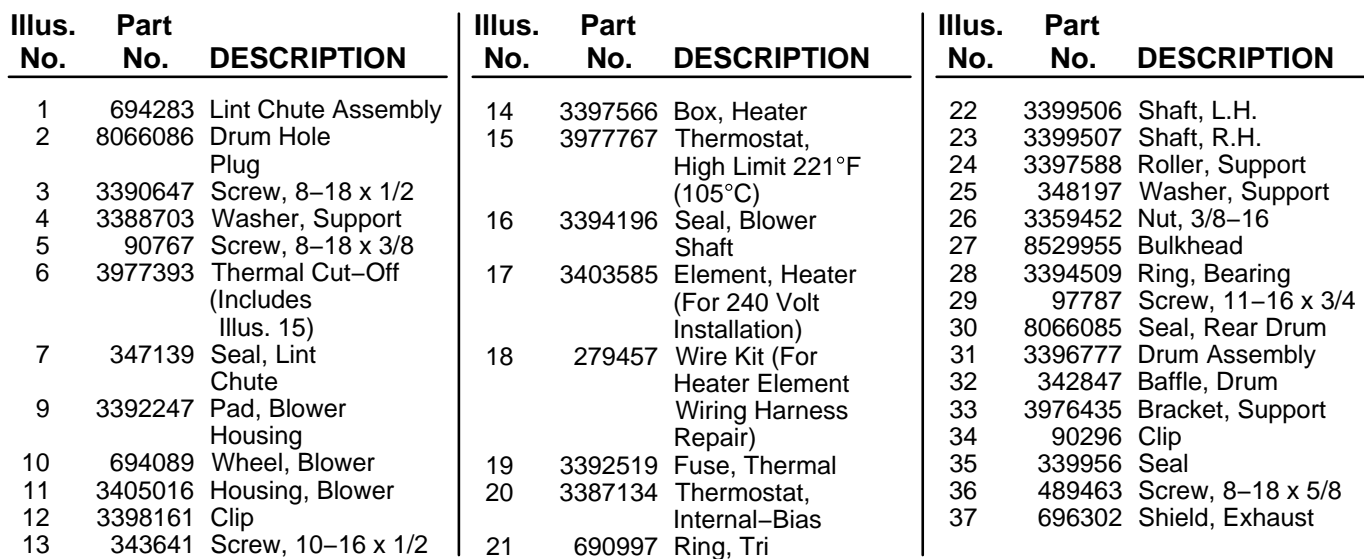

5